

# HOW TO INSTALL A BASALT COLUMN FOUNTAIN KIT



**Step 1:**  
Layout appropriate  
Matrix and  
Pump Canyon  
configuration.



**Step 2:**  
Excavate basin to  
required size  
and depth.




**Step 3:**  
Ensure Matrix &  
Pump Canyon fit.



**Step 4:**  
Install Underliner



**Step 5:**  
Install Liner &  
Pump Canyon.

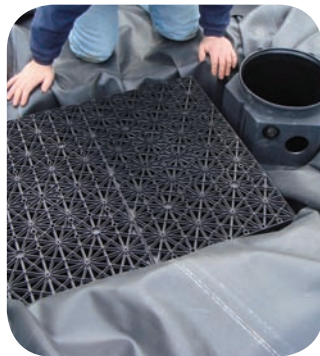

**Step 6:**  
Install Basin Matrix



**Step 7:**  
Install Pump



**Step 8:**  
Run Plumbing Hose



**Step 9:**  
Set Columns



**Step 10:**  
Add Decorative  
Gravel & Level.



**Step 11:**  
Finish Edges  
with Gravel.



**Step 12:**  
Plug in Pump  
and Run!